

Preparation for beacon operation

- The message must be programmed before using of stand-alone beacon. Otherwise the default message will be sent. See separate message programming instruction.
- Connect antenna and power supply
- Switch ON the TX136/500

Selecting beacon mode

Go to CONFIG by long push with the DISPLAY/CONFIG button. Move to the Keyer type page by DISPLAY button and **Select Keyer = Beacon**. Return to normal display by long push with the DISPLAY/CONFIG button

Starting beacon transmission

Select OPER state with the OPER button

Push long the OPER button => Beacon starts continuous transmission

Stopping beacon transmission

Push long the OPER button (short push will put the transmitter to the STBY state).

Automatic beacon resume after a mains break

Inserting the Power On jumper Q4 on the Control Module.